

Mystery Motion™

Email: cats@petlinkssystem.com
Mail: petlinks, Dept. PL
P.O. Box 3360
San Rafael, CA 94912-3360
Phone: 415-721-7400
Web: www.petlinkssystem.com

EXERCISE

Concealed-mouse motion toy

Products to fit your pet's specific needs™ **petlinks**
SYSTEM

SAFETY INFORMATION:

This toy is fitted with safety devices. Use this toy only as described in the instructions and read all safety instructions to avoid possible damage or injury.

Store these instructions in a safe place for future reference.

To prevent damage to property, keep away from heat sources, direct sunlight and humidity.

WARNING:



For pets only. Contains small parts. Keep out of reach of children. Read all instructions and safety information before use. Pets should be supervised when playing with this toy. Remove toy from pet if any part becomes loose or detached. Store out of pet's reach when not in use. Remove all packaging and dispose of properly.

BATTERY WARNING:

Do not mix old and new batteries. Do not mix alkaline, standard (Carbon-Zinc) and/or rechargeable (Nickel-Cadmium) batteries. Only batteries of the same or equivalent type as recommended are to be used. Batteries should be replaced with the correct polarity. Exhausted batteries are to be removed from product. Please recycle used batteries properly.

CARE INSTRUCTIONS:

Turn the toy OFF. Wipe with soft, dry cloth. Do not immerse in water.

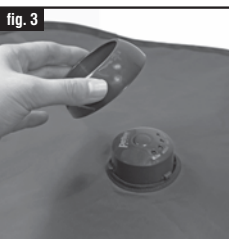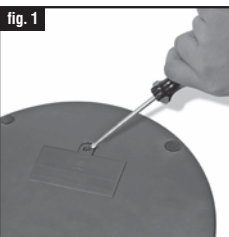

INSTRUCTIONS FOR USE:

Locate and open the battery compartment on bottom of toy with a Phillips screwdriver and insert (3) AA batteries (not included). Ensure the batteries are placed in the correct polarity (+/-). Replace compartment cover (**figure 1**).

Insert the mouse toy attachment securely to the male extension on the base. It will fit snugly when aligned (**figure 2**).

On the top center control, twist and rotate the collar ring counter-clockwise and lift to remove it. Place the fabric cover over the base and replace the collar ring. Twist ring clockwise to lock and secure (**figure 3**).

Press button to power ON and repeat to select SLOW, MIDDLE, FAST, and RANDOM speeds. The red LED lights indicate the 4 speeds available on Mystery Motion. Press repeatedly to power OFF (**figure 4**).

NOTE:

If the moving arm attachment is held down for 12-15 seconds, the toy will automatically shut off to prevent damage to the motor. When this occurs, press the center start button again to re-start.