

Playtime Hints


To maximize your cat's experience with the **Loco!Motion** toy, we've included the following helpful hints. Because each cat has its own distinct preferences when it comes to play, we recommend that you observe your cat's reactions and modify for your own pet.

1. Begin by introducing your cat to the feather attachment by dangling it from your hand in front of your cat before attaching it to the Loco!Motion toy. Let your cat smell the feathers and familiarize itself with the attachment.
2. Cats love unpredictable movement (it's how prey moves in the wild). Experiment with the speed control dial to determine what kind of movement your cat responds to best.
3. While supervision is ALWAYS recommended with any cat toy, some cats will play more aggressively if they think they are alone. If your cat fits into this category, leave the room and peek around the corner to keep an eye on the fun.
4. Watch the action get certifiably insane by storing the feather attachment in **SmartyKat Certified Organic Catnip**.

WARNING: Do not turn the metal arm on the motorized column clockwise by hand as it will result in possible damage to gears. As with all pet products, Worldwise, Inc. recommends close supervision. Never allow your cat to bite off or swallow any part of the attached toy.

SmartyKat® CompleteNeeds® System

The **Loco!Motion** meets the need for EXERCISE, one of the 12 needs described in our SmartyKat Complete-Needs System. For more information about the Loco!Motion and other fine products in the SmartyKat CompleteNeeds System, visit www.worldwise.com.

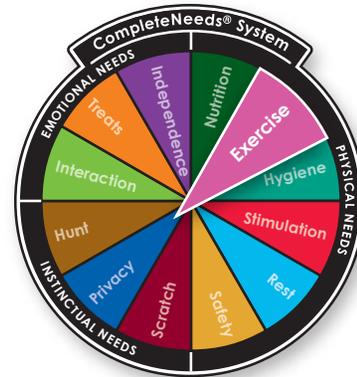

Replacement feather attachments, and other SmartyKat toys that can be used with the Loco!Motion are available where SmartyKat products are sold. Visit us at www.worldwise.com to find a SmartyKat retailer near you.

Email: smartykat@worldwise.com
Mail: Worldwise Inc., Dept. SK
PO BOX 3360
San Rafael, CA 94912-3360
Phone: (415) 721-7400

Because cats need...
COMPLETE NEEDS®
EXERCISE



SmartyKat®
Loco!Motion®
automated activity toy

Instructions

Get Ready For Some **Loco!Motion®...**

Thank you for purchasing the **SmartyKat®**
Loco!Motion automated activity toy.

Our Loco!Motion toy is a perfectly fun way to encourage healthy activity in all cats. Because feline longevity and quality of life are tied to healthy weight levels, the Loco!Motion is a small investment in your cat's happiness and well-being.

SmartyKat Loco!Motion is the next best thing to a membership at the local kitty gym. The erratic movement of the Loco!Motion is so fun and irresistible it gets even the laziest cats moving in the right direction. The plastic wand with the tempting feather attachment swivels and bends unpredictably — driving cats crazy!

For more information about the Loco!Motion, visit www.worldwise.com.

Loco!Motion Fundamentals

GETTING STARTED

1. Remove parts from box. **(figure 1)**
 - a. Base unit
 - b. Motorized column
 - c. Plastic wand
 - d. Feather attachment
2. Install (3) AA batteries (not included) in battery box of base unit.
 - a. Use thumbnail to remove battery box cover.
 - b. Push in batteries, ensuring correct polarity of batteries +/- in box.
3. Open the four stabilizer bars at the bottom of the base unit. **(figure 2)** To open, gently lift stabilizer bars over the rubber skid feet. While looking at the bottom of the base unit, rotate bars counterclockwise and lock into place.
4. Connect motorized column to base unit. **(figure 3)** Be sure to turn column clockwise to lock into place.
5. Slide plastic wand with feather attachment onto column wire. **(figure 4)** Check to be sure it is securely attached.

TIME TO PLAY

1. Familiarize yourself with the simple controls on the base unit of the Loco!Motion. **(figure 5)**
 - a. TIMER (left side)
 - b. SPEED CONTROL (middle)
 - c. ON/OFF (right side)
2. Push the ON/OFF button to start the movement. **(figure 6)** Pushing the ON button one time will result in continual movement. (Use the TIMER button to limit the time to a pre-set number of minutes).
3. Push the TIMER button to control duration of play. The toy can be programmed for 15 minutes up to 2 hours of continuous play. To set the timer, push the TIMER button once for 15 minutes, twice for 30 minutes, etc., up to 8 times for 2 hours. **(figure 7)** To reset TIMER, press the ON/OFF button.
4. Turn the SPEED CONTROL dial clockwise to increase wand speed, counterclockwise to decrease speed. **(figure 8)**

