



**2-Speed and Variable Speed Rotary  
Motor Clipper  
Operation Manual**

**De dos velocidades y Cortadora  
Con Motor Rotatorio de Velocidad  
Variable  
Manual de Insrtucciones**

**Deux vitesses et Pour la Tondeuse à  
Moteur Rotatif à Vitesse Variable  
Mode d'emploi**

part# 94683-102

## **IMPORTANT SAFEGUARDS**

When using an electrical appliance, basic precautions should always be followed, including the following: Read all instructions before using this appliance.

### **DANGER:** To reduce the risk of death or injury by electric shock:

- 1) Do not reach for appliance that has fallen into water, unplug it immediately.
- 2) Do not use while bathing or in a shower.
- 3) Do not place or store appliance where it can fall or be pulled into tub or sink. Do not place in or drop into water or other liquid.
- 4) Always unplug this appliance from electrical outlet immediately after using.
- 5) Unplug this appliance before cleaning.

### **WARNING:** To reduce the risk of burns, fire, electric shock, or injury to person:

- 1) An appliance should never be left unattended when plugged in.
- 2) Close supervision is necessary when this appliance is used by or near children or invalids.
- 3) Use this appliance only for its intended use as described in this manual. Do not use attachments other than those recommended by the manufacturer.
- 4) Never operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into water. Return the appliance to a Service Center for examination and repair.
- 5) Keep the cord away from heated surfaces.
- 6) Never operate this appliance with the air openings blocked or while on a soft surface, such as a bed or couch, where the air openings may be blocked. Keep the air opening free of lint, hair and the like.
- 7) Never drop or insert any object into any opening.
- 8) Do not use outdoors or operate where aerosol (spray) products are being used, where oxygen is being administered or near flammable liquids, such as certain flammable blade lubricants or cleaning agents.
- 9) Do not use this appliance with a damaged or broken comb or blade set, as injury may occur.
- 10) Cord tie should be removed before use to allow the cord to hang free when using.
- 11) Do not place or leave appliance where it may be damaged by an animal or exposed to weather.
- 12) To disconnect, turn all controls to "off" then remove plug from outlet.

**SAVE THESE INSTRUCTIONS  
THIS CLIPPER WAS DESIGNED FOR COMMERCIAL USE**

## Facts about blades and oiling:

- Blades not only become dull from cutting hair – they are dulled by the abrasive particles on the hair, dirt, sand etc.
- Blades will not cut if abrasive particles are picked up and carried between the blades. These particles tend to hold the blades apart and cause chewing and pulling instead of clean cutting.
- Oiling the blades performs two distinct functions:
  - 1) Provides a low friction, very thin lubricant film between the cutting blades so that they can take a full cutting stroke without becoming hot from friction.
  - 2) Flushes abrasive particles and hair out from between the blades.

Note: If you cut into dirt, immediately wash with oil to flush out.

## USE WAHL CLIPPER OIL ONLY.

### Cleaning and general care

- Before cleaning/maintenance, switch the equipment off and remove the main plug from the socket.
- Never immerse the unit in water.
- Each time after use remove any hairs from the cutting blade using the cleaning brush.
- Clean the body of the clipper with a soft, damp cloth. Never use solvents or scouring agents.
- The cutting head should be cleaned and oiled frequently with Wahl Clipper Oil in order to maintain its good cutting performance and thus ensure a long service life.
- The cutting head should be replaced if the cutting performance is reduced after extended use despite regular cleaning and lubrication.
- During use always be sure the cord is not twisted or running over any sharp objects that might cut the cord insulation.

### Directions:

- 1) Turn unit on/ off

#### Variable Speed:

- Turn variable speed switch in clockwise direction to turn unit on and increase speed. To turn unit off and reduce speed, turn switch counter clockwise until hearing a click. (fig. 1)

#### Two Speed Toggle:

- Flip toggle switch up or down to desired speed. To turn unit off flip toggle switch to center position. (fig. 2)

#### Two Speed Switch:

- To slide switch into any position first press down on locking button in the middle of the switch and then slide. (fig. 3) Slide switch down for desired low or high speed. (fig.4) To turn unit off flip toggle switch all the way up

- 2) Remove/ replace blade









- The clipper should be switched off before removing blades. Remove blade. (fig. 5) The cutting head can be removed by pressing the button under the blade and pushing the blade away from the housing. Note: Blade button not available on all models. To refit the blade set, the clipper should be turned on and running. Fit the blade into the metal guide and press it into place. There will be a definite "click" when the blade is snapped in place.

- 3) Remove/ replace drive tip

- See step 2, then remove drive tip by grasping with drive tip removal tool and pulling. (fig. 6A) Install by aligning lower end of drivefinger and pushing until drive tip snaps into position. (fig. 6B) (Don't use pliers to replace tip, as this may damage the part.)

- 4) Remove/ replace hinge

- See step 2, then remove two screws. Lift hinge assembly from unit. (fig. 7)

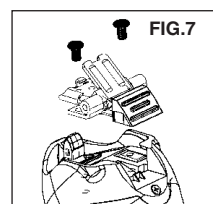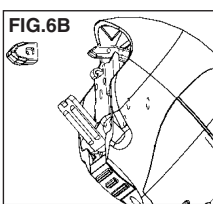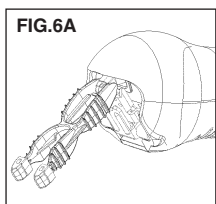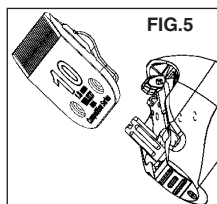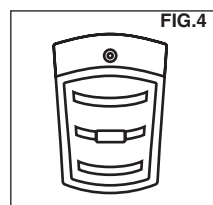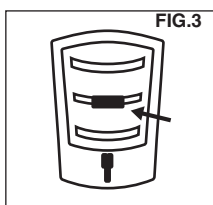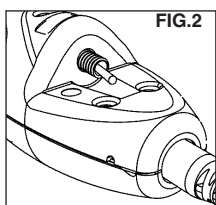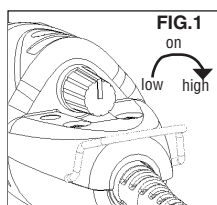

## LIMITED 1 (ONE) YEAR WARRANTY

If your Wahl Product fails to operate satisfactorily within one year from the date of original purchase or receipt as a gift, Wahl will at our option repair or replace it and return it to you FREE OF CHARGE. Our warranty does not cover blades, brushes or other wear out parts. Please mail your product prepaid to Wahl Clipper Corporation, Sterling, Illinois 61081. Attention: Repair Department, with a note describing the defect and the date of original purchase or receipt as gift (if in warranty). Products out of warranty will be repaired at our standard repair charges.

This warranty is void and no repair or replacement will be made under this warranty or otherwise if:

- 1) The product is modified in any manner.
- 2) The product is repaired by anyone other than Wahl Clipper Corporation or a Wahl Master Service Center.
- 3) The product has been subject to unreasonable use.

This warranty gives you specific legal rights and you may also have other rights which may vary from state to state. No other written express warranty is given. Any implied warranty, including any warranty of merchantability, which may arise from purchase or use, is limited to the one-year period in this express warranty. Some states may not allow such limitation, so it may not apply to you. No responsibility is assumed for incidental or consequential damages of any type, or the use of unauthorized attachments. Some states may not allow the exclusion or limitation of incidental or consequential damages, so the limitation or exclusion may not apply to you. Warranty valid in the United States.

Wahl Clipper Corporation  
2900 North Locust Street  
Sterling, Illinois 61081  
(815) 625-6525 Fax: (815) 625-0091