

Troubleshooting Guidelines	
SYMPTOM	COMMENTS/SOLUTIONS
If the filter does not start. .	<ul style="list-style-type: none"> <li>• Make sure that the Airline Tubing and Diffuser Tube are attached properly and that the O-Ring in the Diffuser Tube is in place.</li> <li>• With dry hands, make sure the Air Pump is plugged into a working electrical source.</li> </ul>
If the LED Light won't turn on. . .	<ul style="list-style-type: none"> <li>• Make sure that the AC Adapter is plugged into an electrical source. Check to make sure that the AC Adapter Jack is inserted fully into the plug on the back of the LED Light Box.</li> </ul>

 
**IMPORTANT:**  
Always unplug your LED Aquarium Kit when inspecting or disassembling for any reason

**LIMITED WARRANTY:** Within one year from the date of original purchase, we will repair or replace, at our option, any LED Aquarium Kit which is deemed defective in workmanship or materials. This includes: Cube, Base, LED Light, AC Adapter, and Filter Housing.

If the LED Aquarium Kit is found to be defective, and has not been modified, damaged or misused, please return the unit with a copy of the receipt and proof of date of purchase: Call (800) 526-0650 for return authorization and shipping address.

Damage or injuries resulting from improper installation, negligence or misuse are expressly not covered by this warranty. Incidental or consequential damages are specifically excluded.\* Fish loss, personal injury, property loss or damage resulting from use of these products are not covered by this warranty. Incidental or consequential damages are specifically excluded.\* This warranty gives you specific legal rights. You may also have other rights which vary from state to state.

\*Because some states do not allow the exclusion of incidental or consequential damages, this exclusion may not apply to you.

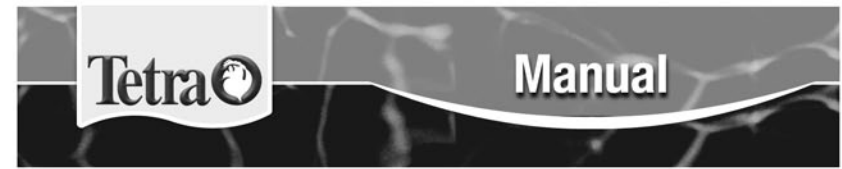

# LED Aquarium Kit



**Replacement Filter Cartridge**  
Tetra Whisper  
Bio-Bag size small



## For Optimum Performance

1. Replace filter cartridge (Tetra Cartridge size small) every 2 to 3 weeks for optimal fish health. Available at your local retailer.
2. **NEVER** plug the Air Pump in without water in the Aquarium.
3. **NEVER** immerse Air Pump in Water. Air Pump NEVER needs oil.
4. Clean outside of Air Pump with damp cloth and mild detergent.



 
# IMPORTANT SAFEGUARDS

**WARNING:** To guard against injury, basic safety precautions should be observed, including the following.


## READ AND FOLLOW ALL SAFETY INSTRUCTIONS

**DANGER:** Since water is employed in the use of aquarium equipment, special care should be taken to avoid electric shock. For each of the following situations, do not attempt to repair the appliance yourself. Return it to an authorized service facility for service, or discard it.

1. **A.** If the appliance falls into the water, do not reach for it. First unplug it and then retrieve it.
  - B.** If electrical components of the appliance get wet, unplug the appliance immediately.
  - C.** Carefully examine the appliance after installation. It should not be plugged in if there is water on parts not intended to get wet.
  - D.** Do not operate any appliance if it has a damaged cord or plug, if it is malfunctioning, or if it has been dropped or damaged in any manner.
  - E.** To avoid the possibility of water dripping onto the appliance plug or outlet, position aquarium stand and tank to one side of a wall-mounted outlet. A “drip loop” (see illustration) should be arranged for each cord connecting an aquarium appliance to an outlet. The “drip loop” is the part of the cord below the level of the outlet (or extension cord connector) that prevents water from traveling along the cord to the outlet. If the plug or outlet gets wet, do not unplug the cord. Disconnect the fuse or circuit breaker that supplies power to the appliance. Then unplug the appliance and examine the outlet for presence of water.
2. Close supervision is necessary when any appliance is used by or near children.
  3. To avoid injury, do not contact moving parts or hot parts such as heaters, reflectors, lamp bulbs, etc.
  4. Always unplug an appliance from an outlet when it is not in use, before putting on or taking off its parts, and before cleaning it. Never yank cord to pull plug from outlet. Grasp the plug and pull to disconnect.
  5. If an extension cord is necessary, a cord with a proper rating should be used. A cord rated for fewer amperes or watts than the appliance rating may overheat. Care should be taken to arrange the cord so that it will not be tripped over or pulled.
  6. Do not use an appliance for other than its intended use. The use of attachments not recommended or sold by the appliance manufacturer may cause an unsafe condition.
  7. Do not install or store the appliance where it will be exposed to the weather or to temperatures below freezing.
  8. Make sure the appliance is securely mounted on aquarium before operating it.

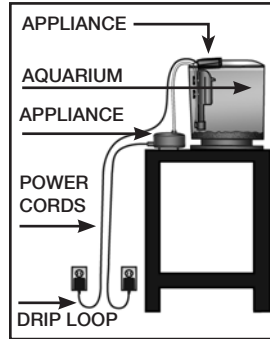

## Parts Diagram & Identification

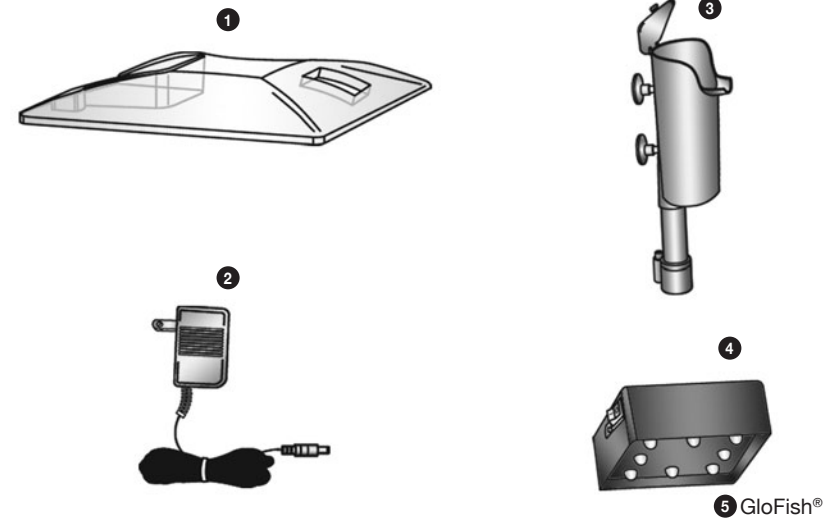 

### Replacement Parts List

KEY	ITEM DESCRIPTION	MODEL SIZE
1	Clear Lid	29051-00
2	AC Low Voltage Adapter Plug	29054-00
3	Filter Assembly	25846-00
4	LED Light with <b>White</b> LEDs	29052-00
<b>GloFish® Replacement LED Light</b>		
5	LED Light with <b>Blue</b> LEDs	29053-00

**For questions or missing parts  
contact customer service at  
(800) 526-0650 • [www.tetra-fish.com](http://www.tetra-fish.com)  
M-F 7:30 A.M. to 5:30 P.M. Eastern Time**

© 2011 Tetra Holding, Inc.

## SAVE THESE INSTRUCTIONS

