


CATchall

Wall-mounted Cat Scratcher,
Perch & Toy Storage

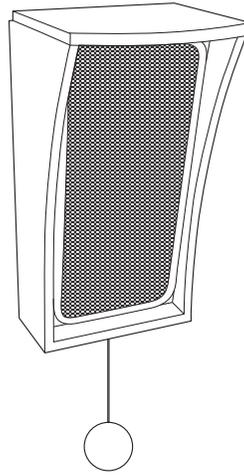


Assembly & Installation Instructions

Need help?


Call 214-257-8068

Email info@primetimepetz.com

PARTS

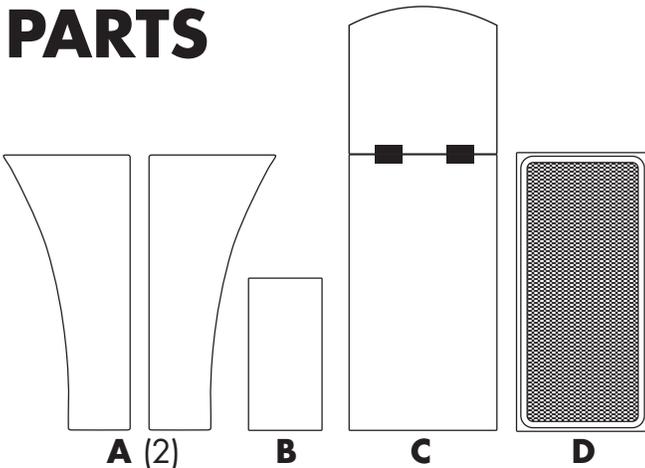


- A) Side Panels (2)
- B) Bottom Panel
- C) Back/Top Panels Connected with Hinges
- D) Front Panel with Sisal Scratching Pad Attached

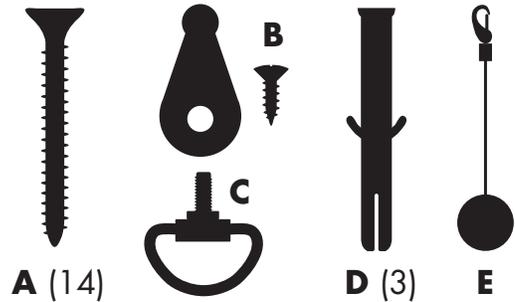

- A) Screws* (14)
- B) Plastic Lid Latch with Mounting Screw
- C) Toy Hook
- D) Wall Anchors (3)
- E) Cat Toy

* Note: for white finish, use screws with white ends where visible on sides and bottom, use screws with black ends for mounting to wall.

TOOLS NEEDED

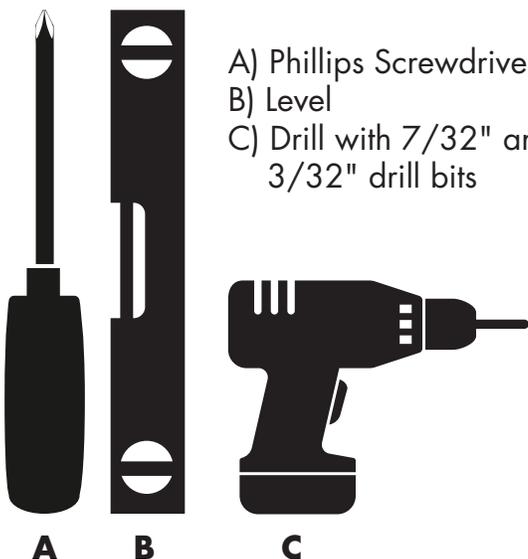

- A) Phillips Screwdriver
- B) Level
- C) Drill with 7/32" and 3/32" drill bits

Please read all instructions carefully before assembling and installing. Holds up to 50 lbs. when properly mounted. It is recommended to mount screws directly into wall studs, or use heavy duty wall anchors that are appropriate for your particular wall surface. Note, you may need different anchors from those provided, depending on your walls. Not for use by children.

Manufactured by Primetime Petz
www.primetimepetz.com



Choosing the Right Location & Height for CATchall

Cats scratch in order to mark their territory, so they prefer to scratch in socially significant areas. These are places where you spend the most time, such as your favorite chair, your desk or your bed. Pick a location in your home where your cat spends time and position CATchall so your cat can easily reach the scratching surface.

You can hang CATchall up higher for cats who like to stretch out when scratching or down lower, whichever your cat prefers. Also, make sure that the top perch allows your cat to easily jump on and off, leading to other perches or ledges.


And don't forget the storage inside! Make sure you can reach the storage compartment easily, that feature is for you.

Assembling and installing CATchall is simple. First, attach the sides and bottom to the back and top (back and top are already connect with hinges), leaving the front piece off. Mount CATchall to the wall and then finish by attaching the front.

Step 1

Attach each side panel to the back panel using two screws through back panel. Make sure plastic inserts in side panels are facing inside.

NOTE: If screws won't fit easily into plastic inserts, use screwdriver to gently rotate plastic insert so arrow faces edge where screw is being inserted.

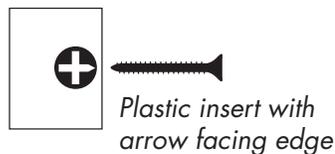

Step 2

Attach plastic lid latch to inside of back panel using small screw provided, placing flat side of latch against panel. Tighten the screw enough so latch can rotate but so it will stay upright to hold lid open.

Step 3

Attach bottom panel using three screws. Make sure metal insert faces inside.

Step 4

Attach toy hook to bottom panel by screwing hook into threaded insert. Attach toy to hook.

Step 5

Place CATchall on wall at desired height, use a level to make sure CATchall is straight. Mark location of three holes in back panel on wall using sharp end of a screw. Try to align any of the holes with a wall stud for a more secure attachment.

Step 6

Drill holes in wall at marks with 7/32" drill bit if using anchors and 3/32" drill bit if mounting into wall stud. Insert anchors in wall if using. Attach CATchall to the wall with screws through back panel and into studs or wall anchors.

Step 7

Attach front panel with sisal scratching pad facing out using two screws through each side panel.

