

90X130MM

frisco.
better pet goods

ELECTRONIC DANCING FISH INSTRUCTION MANUAL

Please read this manual carefully before use.

IMPORTANT SAFETY AND PRODUCT INFORMATION

WARNING: Please read all safety and product information below before using your Frisco product. Failure to follow these safety instructions could result in injury to you, your pet and others, or it could result in damage to your Frisco product or other property.

PARTS INCLUDED



Dancing Fish
Plush Shell



Dancing Fish
Mechanism



USB Charging
Cable



Catnip Tube

CHARGING INSTRUCTIONS

Charge the non-replaceable lithium-ion battery with a 5V output for 90 minutes. The battery must be fully charged before the first use.

HINT: A red light means the product is still charging. No light means the product is fully charged.

HINT: Playtime will last approximately 50 minutes on a full charge.



PLAY INSTRUCTIONS

1. Insert the dancing fish mechanism tail first and flip the toggle switch to "on."



2. Align and seal the hook-and-loop fasteners.

HINT: If you're having trouble closing the toy, make sure that the inner material isn't stuck to the hook-and-loop fasteners.

3. Once sealed, press the fish's belly to start playing.

HINT: To entice your cat to play, sprinkle some of the included catnip inside the inner pouch.

HINT: When the fish stops flopping, simply tap the belly to get playtime started again.

RECHARGEABLE LITHIUM ION BATTERY WARNING & CAUTION

- DO NOT charge this product near any flammable substances.
- DO NOT operate this product while still charging.
- Remove dancing mechanism from fish belly to charge.
- For pet use only. This product should only be operated by a responsible adult.
- DO NOT disassemble the battery compartment.
- The battery is non-replaceable. If the battery is exposed or removed, please dispose of the battery properly in accordance with your local waste rules and regulations.
- Ensure that both the product and batteries are disposed of properly in accordance with your local waste rules and regulations.
- Discontinue use if the product is damaged.
- If you think the battery may have been swallowed or placed inside any part of the body, seek immediate medical attention.
- The battery should be charged prior to use and only charged with the specified charger.
- Don't store the product with the battery in temperatures over 60°C.

Model: 263525

Size: 11.5 x 4.5 in / 29 x 11.5 cm

Power Supply: Lithium battery 3.7V 400mAh

DC Power(suggested): 5V/1A standard power supply

Rated voltage: 5V



QUESTIONS?

CALL OUR FRIENDLY CUSTOMER SERVICE TEAM ANYTIME.
WE'RE HERE 24/7! 1-800-67-CHEWY (672-4399)

Available at [chewy.com](https://www.chewy.com) 1-800-672-4399