

AQUARIUM INSTRUCTIONS FOR USE

For Household Use Only

KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE



Aquarium Kit AP35000FFP



Children under the age of 13 should be supervised by an adult with the setup, maintenance and fish care

1. Your Aquarium

People of all ages enjoy looking at aquariums. Aside from the belief that an aquarium is beautiful, many also believe having an aquarium can be relaxing, rewarding and a great conversation piece all at the same time. You will have many enjoyable hours with your new aquarium and fish.

Included in your Aquarium Kit



4. Rinsing Gravel and Decor

Rinse materials in running water; aquarium, gravel, stones, plastic plants and other decorations, etc. Place gravel in a colander or new bucket and rinse under running tap water until water runs clear. Never clean aquarium, decorations, or filter with household



Gravel and Decorations are not included with this aquarium kit.

2. Important Instructions

Read This Section before operating this unit.

For Household Use Only. Confirm your tank has not been damaged during shipping before you start the setup process. Completely install aquarium before operating. The LED unit is powered by 3 AAA batteries or by a 5V Power Adapter, neither are included in this kit. To avoid the unit plug or receptacle from getting wet, position the tank and stand to one side of a wall mounted receptacle to prevent water from dripping onto it. A “Drip Loop” should be made as shown at left. Use of a GFCI rated outlet or circuit is recommended.



DRIP LOOP

5. Battery Requirements

WARNING:

1. Do not mix old and new batteries.
2. Do not mix Alkaline, Standard or Rechargeable Batteries.
3. LED light uses 3 AAA batteries.

TIMER SELECTION SWITCH with 3 settings you can select:

- Continuous On *
- 2 Hour Duration (2H)
- 4 Hour Duration (4H)



Note – Battery Position and Positive / Negative Orientation

*It is recommended to use this setting sparingly in order to conserve battery power unless using USB connector or optional 5V Power Adapter AQ51000 .

3. Tank Placement

Leave enough space in back of the aquarium to allow easy access to the filter and various electrical cords from the electrical equipment.

Good places for your aquarium

•On a table or aquarium stand that’s capable of bearing the weight of your filled aquarium.

Places to avoid

- Near direct sources of sunlight (e.g. windows), unwanted algae growth may occur.
- Near direct sources of heat or air conditioning (e.g. radiator, forced air vent).
- Drafty areas.
- Around sources of noise (e.g. stereo speakers, TV).
- Do not place aquarium on any surface that can be damaged by water or where water can come in contact with other electrical appliances.



6. LED Light Set Up

• To turn on LED light press the blue button switch on top of the light. Continue to press the blue button until desired color is located. 7 colors to choose from; amber, aqua, blue, green, purple, red and white.



•USB Micro-B cord enables LED light to operate without batteries. Insert Micro-B-USB plug into back of LED light port and opposite end of cord into computer or into USB power supply .



•Optional (not included) Power Supply 5V 1A (model AQ51000) available at online retailers.



7. Adding Water

- Fill the aquarium with water to within two inches of the top of the tank.
- Treat the water with Tetra Aquasafe® to remove chlorine and chloramines from tap water that can be harmful to your fish.
- Allow time for the water in your aquarium to reach room temperature.




10. Adding Fish


- Float the bag with your fish on the surface of the aquarium for 15 minutes.
- Open the bag containing your new fish, taking care that the bag does not collapse, and add a little aquarium water every two minutes directly to bag.
- Continue this process for 10 minutes, allowing the bag to fill with water.
- Take bag with fish to sink and gently scoop fish out with a net or pour bag of water into net. Then place fish into aquarium. Do not add water from fish bag in order to prevent introduction of possible disease or parasites from store water.

8. Setting Up Power Filter

- Locate and remove the adjustable mounting bracket from the box. Place mounting bracket at 90° and align one of the adjustment holes onto the mounting post, rotating it upwards until hanger is vertical.

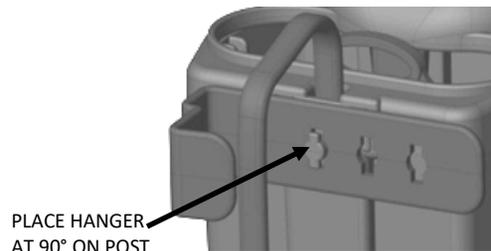

- ROTATE HOOK VERTICAL, THEN INSERT POWER CORD INTO HOLDER AT TOP OF BRACKET

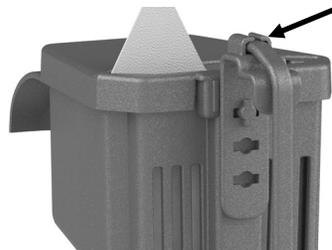


11. Ongoing Maintenance

- Perform a 25% water change monthly, more frequently if necessary depending on number of fish and amount of daily feedings, using a vacuum gravel siphon to thoroughly remove uneaten food and waste buildup.
- Replace Tetra Whisper XS filter cartridge® every 3 to 4 weeks, depending on the number of fish and amount of daily feedings, to keep filter running efficiently.
- Test pH, ammonia and nitrite weekly using Tetra EasyStrips® Test Strips. Performing these tests will allow you to monitor the water quality of your aquarium. If readings are not in the preferred range, perform a partial water change.

9. Installing Power Filter

- Install filter inside the aquarium, hanging the filter onto the aquarium rim. The water level of the filled aquarium should be at the top of the line on the front of the filter. To raise or lower the filter adjust the hanger by rotating the hanger 90°, removing it, and replacing it onto an alternate alignment hole.

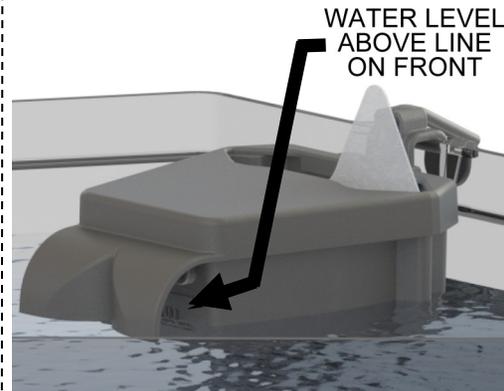

Please note the water level line indicated on the front of the housing

12. Optional Heater

Select proper sized heater appropriate for your aquarium size. Read and follow the heater's instructions. Check with your retailer for recommended heater settings. Adjust heater settings as directed and confirm water temperature with thermometer. Always use a power strip with surge protector to safeguard your electrical equipment.



Heater and Thermometer not included, must be purchased separately



LIMITED WARRANTY

KOLLER PRODUCTS LLC warrants this aquarium product to be free from defects in material and workmanship under normal use and service and according to the provisions as specified in the accompanying assembly and operating instructions, for a period of 1 year from date of purchase.

This warranty does not cover and KOLLER PRODUCTS LLC is not liable for the cost of repair or replacement of parts which have been subject to misuse, negligence, accident, improper installation, damage during shipment or handling, normal deterioration due to wear and exposure or defects caused by unauthorized parts or modification.

UNDER NO CIRCUMSTANCES WILL KOLLER PRODUCTS LLC BE LIABLE FOR ACCIDENTAL OR CONSEQUENTIAL DAMAGES, INCLUDING BUT NOT LIMITED TO LOSS OF PROPERTY OR EQUIPMENT.

Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitation on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you. This warranty gives you the legal rights, which vary from state to state.

**FOR WARRANTY HELP
REPLACEMENT PARTS
OR TECH SUPPORT**

**PLEASE EMAIL:
customer@
kollerproducts.com**

OR CALL (800) 545-1344

To view our help videos please go to: **www.youtube.com** and search: **Koller Products**

Manufactured by KOLLER PRODUCTS
Shawnee, KS 66218 USA