BoosterBath®

Medium Assembly Instructions

Tools Needed: Phillips head screwdiver

Push 12 rubber bumpers into receiving holes in the bottom of each Booster Pedestal.

Install Booster Pedestals to legs as shown.

Attach legs as shown. **Note:** Make sure that legs marked with "A" are attached in the front of the Booster Bath. Legs marked "B" are designed to attach at rear.

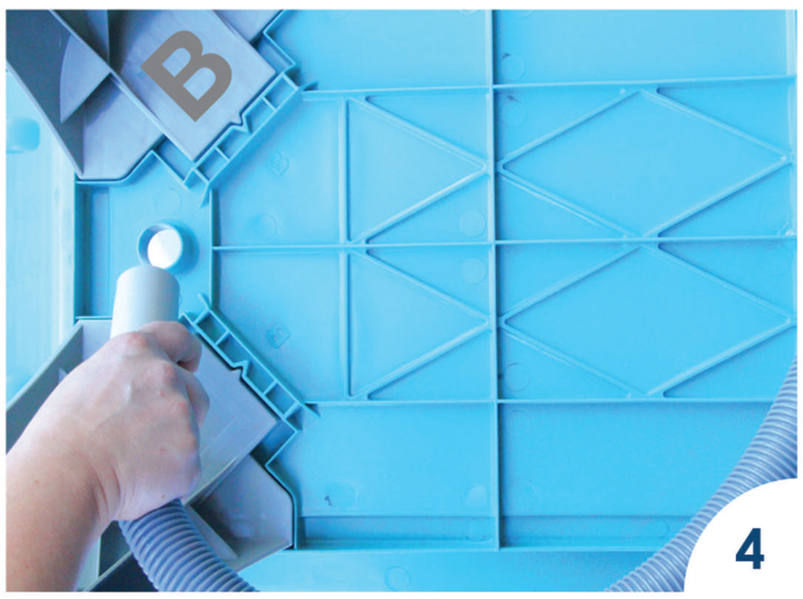

Push drain hose on, as shown. Flip tub upright when complete.

Install 4 mat clips using 8 small screws.

Install Shampoo Caddy in rear wall of tub.

Place leash restraint in T-formation.

Place plastic washers over steel eyehooks. Push eyehook through hole in sidewall of tub and screw on plastic knob firmly.

MADE IN USA

For any questions or concerns please contact us at info@boosterbath.com