


frisco.
better pet goods

62IN
CAT TREE

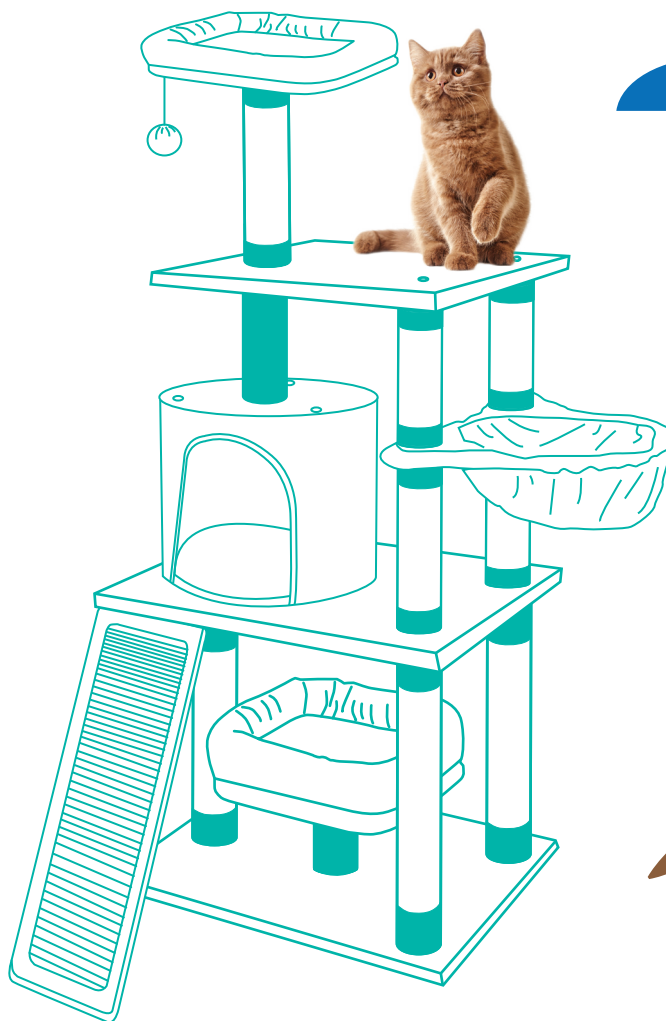

SKU# 252566, 252545, 252546

OVERALL DIMENSIONS

62 in H x 30.7 in W x 33.5 in L
158 cm H x 78 cm W x 85 cm L

BASEBOARD DIMENSIONS

19.1 in W x 23.5 in L
48.5 cm W x 59.5 cm L

CAT TREE

INSTRUCTION MANUAL

WARNINGS & CAUTIONS

PLEASE READ AND FOLLOW ALL WARNINGS AND INSTRUCTIONS TO AVOID PET INJURY OR PROPERTY DAMAGES.





















































- Keep all tools and instructions in a safe place for future reference.
- Follow the instructions carefully and make sure you've completed each step.
- This cat tree is intended for cat use only, please keep children away.
- Keep all small parts away from children/pets to avoid choking hazards.
- Never climb, rock, shake, step or hang on the cat tree.
- Place your cat tree indoors, away from direct sunlight or damp areas.
- Cat trees should be placed on a flat, level surface for stability.
- Check your cat tree often for loose screws or parts that might need re-tightening.
- If your cat tree gets torn or damaged, please discard it.
- The product photo may vary slightly from your fully assembled cat tree as this product is continually being enhanced.

CLEANING INSTRUCTIONS

Spot clean stains and vacuum fur (using small handheld or attachment) when necessary.


COMPONENTS

Prior to assembly, be sure to identify and sort all components shown below.

1	2	3	4	5																																																	
																																																					
1PC Base Board	1PC Perch Platform	1PC Platform	1PC Scratching Board	1PC Apartment																																																	
6	7	8	9																																																		
																																																					
1PC Platform	1PC Perch Platform	3 PCS Post 265 mm	1PC Post 305mm																																																		
10	11	12	13																																																		
																																																					
1 PC Post 200mm	2 PC Scratching Post 295 mm	2 PC Scratching Post 305 mm	3 PCS Scratching Post 500 mm																																																		
14	15	16																																																			
																																																					
1 PC Scratching Post 350mm	1PC Hammock	2 PCS Bolstered Perch Cover																																																			
					<table border="0"> <tbody> <tr> <td style="text-align: center;">A</td> <td></td> <td>M8 X 40mm Bolt</td> <td>6 PCS</td> </tr> <tr> <td style="text-align: center;">B</td> <td></td> <td>M10 X 46mm Bolt</td> <td>8 PCS</td> </tr> <tr> <td style="text-align: center;">C</td> <td></td> <td>M10 X 90mm Bolt</td> <td>5 PCS</td> </tr> <tr> <td style="text-align: center;">D</td> <td></td> <td>M8 X 31mm Bolt</td> <td>1 PC</td> </tr> <tr> <td style="text-align: center;">E</td> <td></td> <td>M6 X 16mm Bolt</td> <td>4 PCS</td> </tr> <tr> <td style="text-align: center;">F</td> <td></td> <td>M4 X 30mm Screw</td> <td>1 PC</td> </tr> <tr> <td style="text-align: center;">G</td> <td></td> <td>18 mm Washer</td> <td>1 PC</td> </tr> <tr> <td style="text-align: center;">H</td> <td></td> <td>30mm Drywall Anchor</td> <td>1 PC</td> </tr> <tr> <td></td> <td></td> <td>Bracket</td> <td>2 PCS</td> </tr> <tr> <td></td> <td></td> <td>5mm Wrench</td> <td>1 PC</td> </tr> <tr> <td></td> <td></td> <td>4mm Wrench</td> <td>1 PC</td> </tr> <tr> <td></td> <td></td> <td>Wall Anchor Strap</td> <td>1 PC</td> </tr> </tbody> </table>	A		M8 X 40mm Bolt	6 PCS	B		M10 X 46mm Bolt	8 PCS	C		M10 X 90mm Bolt	5 PCS	D		M8 X 31mm Bolt	1 PC	E		M6 X 16mm Bolt	4 PCS	F		M4 X 30mm Screw	1 PC	G		18 mm Washer	1 PC	H		30mm Drywall Anchor	1 PC			Bracket	2 PCS			5mm Wrench	1 PC			4mm Wrench	1 PC			Wall Anchor Strap	1 PC
A		M8 X 40mm Bolt	6 PCS																																																		
B		M10 X 46mm Bolt	8 PCS																																																		
C		M10 X 90mm Bolt	5 PCS																																																		
D		M8 X 31mm Bolt	1 PC																																																		
E		M6 X 16mm Bolt	4 PCS																																																		
F		M4 X 30mm Screw	1 PC																																																		
G		18 mm Washer	1 PC																																																		
H		30mm Drywall Anchor	1 PC																																																		
		Bracket	2 PCS																																																		
		5mm Wrench	1 PC																																																		
		4mm Wrench	1 PC																																																		
		Wall Anchor Strap	1 PC																																																		


ASSEMBLY INSTRUCTIONS

STEP 1

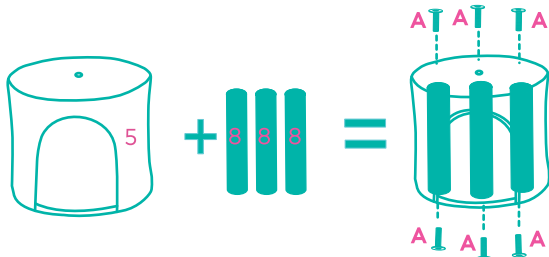


For easier assembly, insert all 3 posts inside to frame the apartment from each corner. Use the wrench key to locate and align the holes between apartment board and post, then loosely attach the screws at both ends without completely tightening. Repeat for all corners. Then, tighten all 6 screws to finish apartment assembly.


STEP 2

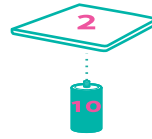


STEP 3

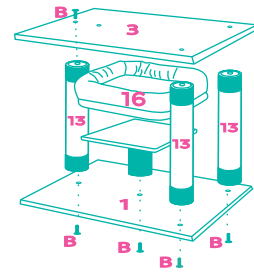

STEP 4

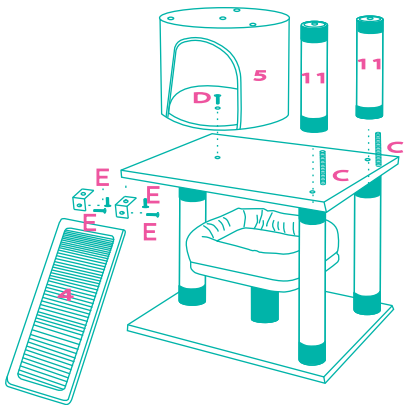


STEP 5

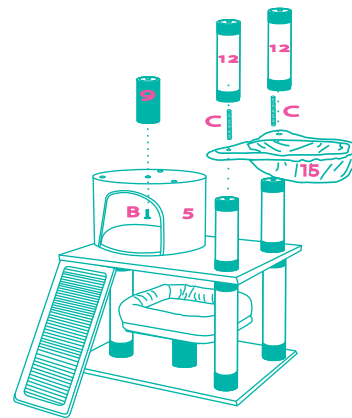

STEP 6



FINISHED ASSEMBLY

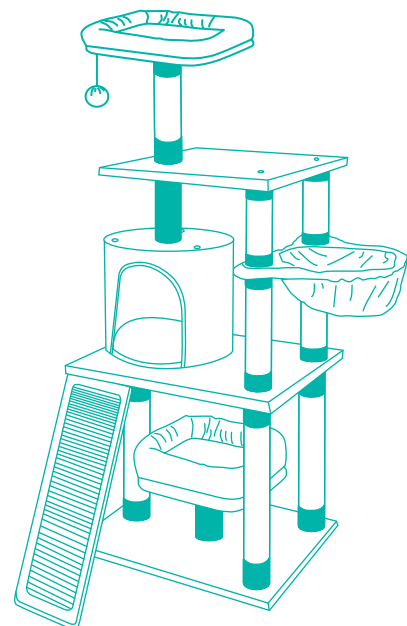

FULL ASSEMBLY

