

FAQ:

1. What tools does the attachment work with?

## Compatible with / Compatible avec / Compatible con

	3000	4000	4300	7300-PGT	7700	8100	8220
	●	●	●	●	●	●	●


2. I have a Dremel 7300 that I've been using for pet grooming. Does the attachment work with my tool?
  - No, the attachment connects to the tool via the threaded nose cap that is on the front of some Dremel tools. The 7300-PGT is a unique product that contains this threaded Nosecap. The standard Dremel 7300 is a separate product and does not contain the threaded Nosecap feature.
3. What should the tool speed be set at for grooming my pet's nails?
  - The tool speed should not exceed 10,000 RPM. If you exceed this speed you risk causing discomfort to the animal because the nail heats up quickly at higher speeds.

Tool Model	Speed Setting	Approximate RPM
3000	2	5,000-10,000
4000	5-10	5,000-10,000
4300	5-10	5,000-10,000
7300-PGT	LO (1)	6,500
7700	LO (1)	10,000
8100	2	5,000
8220	5-10	5,000-10,000

4. What are the different height adjustments on the side of the pet grooming attachment for?
  - The height adjustments allow the attachment to be used with a variety of Dremel rotary tools. Please set the height based upon the tool with which you wish to use the attachment.

Height Adjustment Guide Position	Compatible Dremel Models
1	8100
2	3000, 4000, 4300, 8220
3	7300-PGT, 7700


5. I can't fit the accessory shank in the tool. It looks like the hole in the tool is too small.
- If the EZ Lock™ mandrel does not fit into the collet, it is possible that the collet is stuck within the collet nut. If this happens, remove the collet nut from the tool by continuing to twist it counterclockwise. If the collet does not separate from the collet nut when removed from the tool, push the shank of the EZ Lock™ mandrel 6 into the hole in the collet nut 3. This should cause the collet 4 to pop out of the collet nut 3. Re-assemble by placing the collet 4 into the output shaft 8 and twisting the collet nut 3 clockwise over the collet to tighten it back onto the output shaft 8 (Fig. 3). Then proceed with installing the EZ Lock™ mandrel according to the instructions.

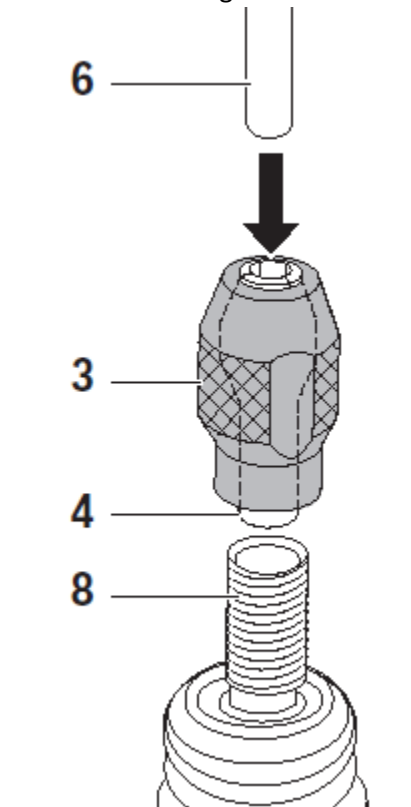

6. How far should I trim my pet's nails?
- Before trimming your pet's nails, you will need to identify the quick. The diagram below shows the basic anatomy of a pet's toenail. The outer nail is hard and has no feeling because it has no nerve endings. The core of the nail is the quick. It is made up of tiny blood vessels

and nerve endings and is very sensitive. The quick is a vein that “feeds” the toenail. Should you cut the quick while trimming a nail, the nail will start to bleed. Light colored nails are often transparent enough to allow you to see the quick’s pink core. Dark colored nails may not allow you to see where the quick is located. Pets may have both light and dark colored nails that allow you to estimate the length of the quick.

The diagram also shows an estimate of the proper angle at which to trim a pet’s nails. A rule of thumb for the proper angle is 45 degrees upwards from the bottom of the paw. This angle is what the guide on the attachment provides. The proper angle may vary according to the pet owner’s wishes or the pet’s unique anatomy. Trim nails so that they almost touch the ground when your pet is walking.

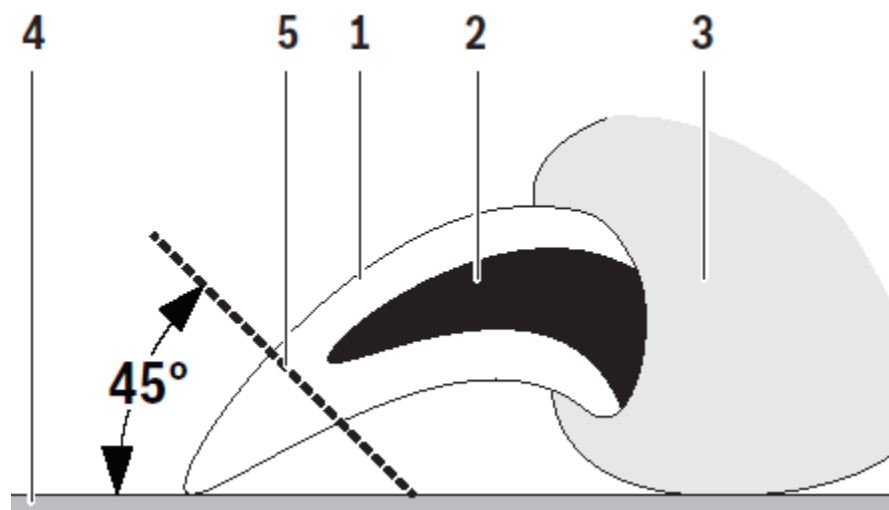

7. I'm worried my pet will be scared of the rotary tool, especially once I go to groom its nails. What should I do?
- Grooming a pet's nails for the first time can be a worrisome experience for both the pet and pet owner. Rest assured that nail grooming does not have to be a stressful experience. By starting early and considering grooming to be part of your pet's training, your pet will grow used to the experience. First, train your pet to feel comfortable with their paws being touched and handled before exposing them to the rotary tool.

One way to do this is to massage their legs, paws, and individual toes for a few minutes at least once a day. Afterwards, create a positive association with this experience by rewarding your pet with its favorite snack. Next, help your pet grow gradually accustomed to the rotary tool. Let your pet sniff the tool while it is turned off. Then, while keeping the tool in your hand, let your pet listen to the sound the tool makes when it is turned on. Ideally, have your pet sit or lay on its side while the tool is in your hand and running. Gradually work up to having your pet's toenails touch the rotating sanding disc for less than a second. Do not grind the nails yet; simply let your pet become familiar with the tool. Throughout the acclimation process, continue to praise

your pet and reward good behavior with a snack. This process may take a couple of days or weeks.

8. What accessories can I use with this attachment?

- The AT01-PGA Pet Grooming attachment can be used with the SD60-PGA pet grooming sanding discs. These specially designed discs are smaller in diameter than the similar EZ411SA, EZ412SA and EZ412SA sanding discs.